



**Oil Dispenser - Automatic Transmission Fluid (ATF)** 7 Litre Capacity

**LASER®**

Instructions

**4792**



[www.lasertools.co.uk](http://www.lasertools.co.uk)

**Guarantee**



Distributed by The Tool Connection Ltd  
Kington Road, Southam, Warwickshire CV47 0DR  
T +44 (0) 1926 815000 F +44 (0) 1926 815988  
info@toolconnection.co.uk [www.toolconnection.co.uk](http://www.toolconnection.co.uk)

If this product fails through faulty materials or workmanship, contact our service department direct on: +44 (0) 1926 818186. Normal wear & tear are excluded as are consumable items & abuse.

This manually operated oil dispenser comes complete with a range of Automatic Transmission Fluid adaptors with quick fix coupling. Simply open the ball valve and the pump handle will dispense 70cc per cycle. The large visual measurement will identify amount dispensed.

## IMPORTANT

Always refer to the vehicle's work shop manual or service instructions.

---

## Instructions

1. Before filling open the black air release cap on the handle.
2. Remove blue cap and fill the reservoir to 7litre mark
3. Close black air release CSP.
4. Make sure the ball valve lever is in the Off position
5. Select the correct adaptor for the vehicle and connect it to the transmission/differential fluid intake.
6. Connect the adaptor to the ball valve quick coupler and tighten
7. Turn ball valve lever to On position
8. Pump the handle to dispense the fluid.
9. Watch the measurement to prevent overfilling

Adaptor	Manufacturer	Description
A	<b>BMW</b>	
B	<b>Volkswagen/Audi</b>	Long
C	<b>Volkswagen/Audi</b>	Short
D	<b>Ford</b>	1/8" - 27NPT
E	<b>Volkswagen/Audi</b>	10mm x 1.0 VAG 6262/2

