

Tyre Valve Core Torque Tool

For removing/installing valve cores. This tool prevents incorrect torque being applied to TPMS valves with sensors.



Additional Information

- Tool is set to 4"/lb (0.45Nm).
- Specialist tool.
- Slot width approx 1.8mm.
-
-

<http://lasertools.co.uk/product/4220>

