

Piston Ring Installer/Remover

Spring loaded piston ring tool, for simple removal and installation of piston rings.



Additional Information

- For piston rings size range 1.2 - 6.3mm (3/64" - 1/4").
- Helps prevent ring breakage.
- Vinyl grip spring loaded handles.
-
-

<http://lasertools.co.uk/product/5250>

