

Instructions

4762





www.lasertools.co.uk

Distributed by The Tool Connection Ltd
Kineton Road, Southam, Warwickshire CV47 0DR
T+44 (0) 1926 815000 F+44 (0) 1926 815988
info@toolconnection.co.uk, www.toolconnection.co.uk



If this product fails through faulty materials or workmanship, contact our service department direct on: +44 (0) 1926 818186. Normal wear and tear are excluded as are consumable items and abuse.

Diesel Injector Puller Set

This 3 piece Diesel Injector Puller Set comes complete with an extractor key for removing the inner part of the injector. It is also suitable for removing injectors without the use of a slide hammer and without removing the cam cover off or damage to the cylinder head.

Applications

Mercedes Benz Sprinter | E-Class | C-Class

Contents

- 1. Diesel Injector Impact Socket 1/2"D 29mm.
- 2. Special 10mm Hex extractor key 1/2"D.
- 3. Support Shaft Bearing assembly with widen shoulders for cylinder head protection.

Instructions

- 1. With 29mm diesel injector window socket screw off the nozzle head of the injector.
- 2. Using special 10mm Hex extractor key remove the insert from the injector.
- Place the Support Shaft bearing assembly over the injector ensuring the wide shoulders of the shaft support the tool.
- 4. With a 10mm spanner or socket screw the shaft down into the injector.
- 5. With a 24mm spanner or socket and an anti-clockwise motion draw the injector out of the cylinder head.



If the injector is still too tight to remove the Laser **4335** has 3 more robust methods to remove injectors from CDi engines.