

# LASER<sup>®</sup>

## Oil Pressure Tester

Supplied with quick coupling adaptors for speed and security

### Instructions



#### Guarantee

If this product fails through faulty materials or workmanship, contact our service department direct on: **+44 (0) 1926 818186**. Normal wear and tear are excluded as are consumable items and abuse.



Distributed by The Tool Connection Ltd


Kineton Road, Southam, Warwickshire CV47 0DR  
T +44 (0) 1926 815000 F +44 (0) 1926 815888  
info@toolconnection.co.uk www.toolconnection.co.uk



Complete with:

- Large dual scaled gauge with oil primed flexible hose.
- Quick coupling adaptors.
- Primable flexible hose.

## Oil Pressure Tester

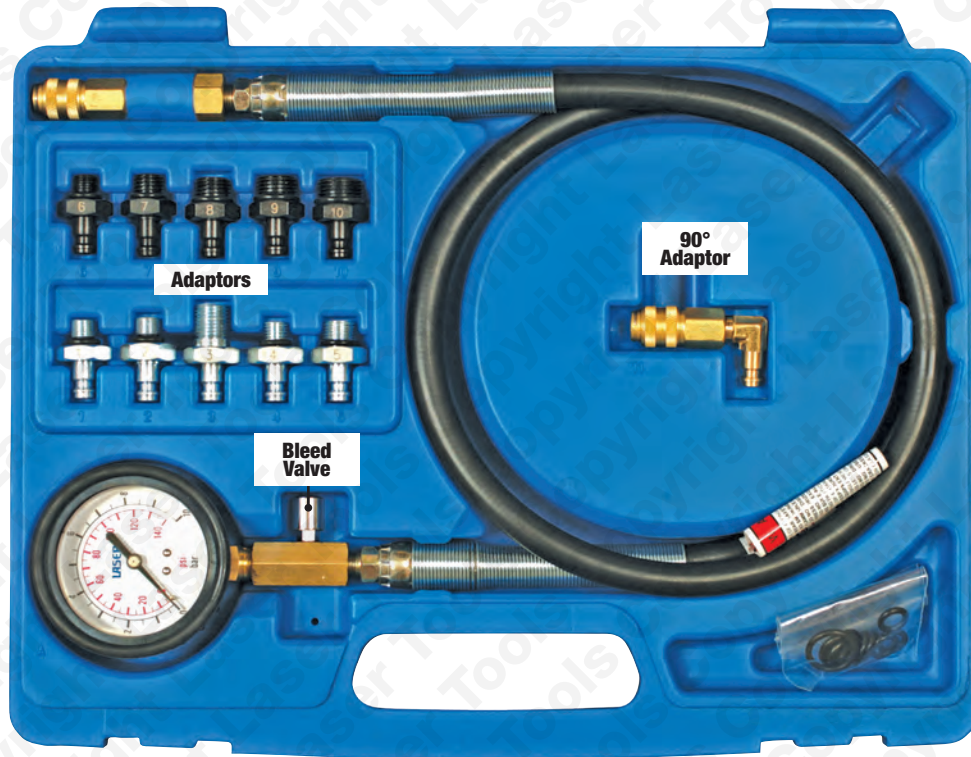

## Instructions

- Identify a suitable connection point for the oil pressure gauge. Some engines are equipped with a blanking plug on the main engine oil gallery.
- In most cases removal of the oil pressure switch is required.
- Select and fit the appropriate threaded adaptor to the engine.
- Connect the hose quick connector either directly to the adaptor or, where access requires it, via the 90° angle connector.
- Start or crank the engine.
- Bleed any air from the pressure hose via the thumb operated bleed valve. NB: have a suitable cloth available to soak up the small amount of oil that may spill from the bleed valve while bleeding the hose.
- Release the bleed valve and the live oil pressure reading should be seen on the gauge while the engine is being cranked or run.