


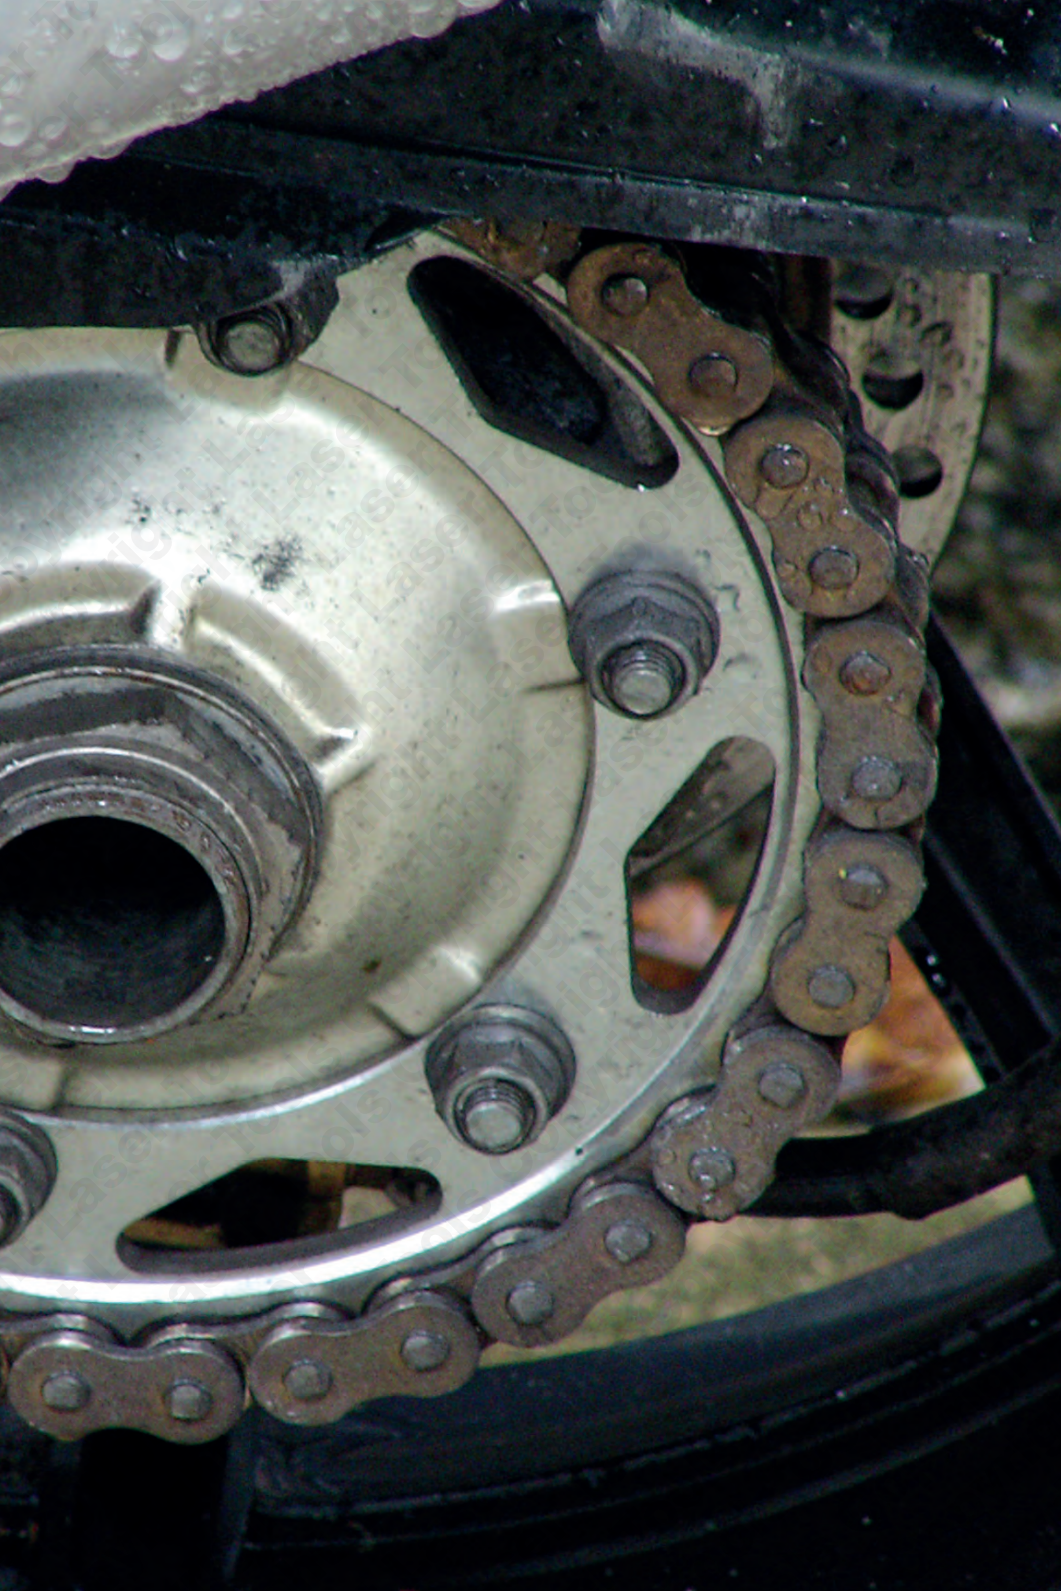

Motorcycle Single Sided Swinging Arm Spanner

For Triumph | Honda | MV Agusta | Ducati

Instructions for use:

1. Loosen the wheel hub pinch bolt.
2. Engage the Laser swinging arm spanner with the wheel hub and turn the hub in the direction required to tighten or loosen the chain.
3. Re-torque the hub pinch bolt to the manufacturers specification.

NOTE: The hub housing can seize in the swinging arm due to internal corrosion between the hub housing and swinging arm. If after loosening the pinch bolt the hub will not turn or will only move a small amount it is recommended the hub be removed from the arm and any corrosion be properly removed.