

Axle Stands | 3 Tonne Capacity

Instructions

A pair of robust Axle Stands. Each stand is constructed of strong steel with steel welded feet and safety locking tag for prevention of accidental release. Angled teeth fit securely into the triangular locking pin.

Safety Precautions


- Check if the stands are in good condition.
- Apply the handbrake and chock the wheels (Park for Automatic transmission).
- Check ground is secure before planning to use axle stands.
- Use axle stands in pairs.
- Check maximum loads.
- Review the situation and do not jack the vehicle if there is risk of injury to personnel or vehicle.
- Read all safety instructions carefully and take note of the recommended operation requirements and warnings as failure to do so will invalidate the warranty.
- Do not use on three wheeled vehicles.
- Do not use when the other end of the vehicle is also jacked up.

Specification

Maximum load: **3 tonne**
Minimum height: **280mm**
Maximum height: **430mm**

Preparation

1. Insert Ratchet into stand base with teeth facing triangular locking bar.
2. Bend in the tab after inserting the ratchet to ensure this cannot be removed.
3. Triangular bar will lock in easily and hold the ratchet in place.

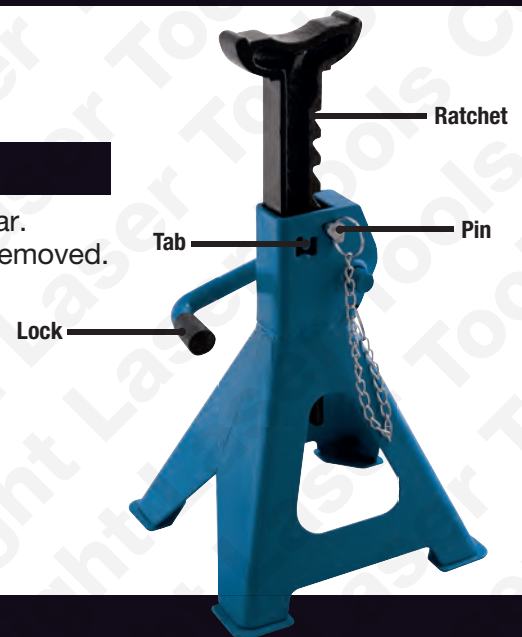

Operation

1. Check vehicle for jacking points and refer to vehicle handbook for manufacturers recommendations.
2. Check the jacking point is in good condition and capable of taking the weight.
3. Lift vehicle with suitable trolley jack (again checking vehicles correct position).
4. Lower the vehicle gently onto the centre of the axle stands saddles.
5. Before releasing the trolley jack make sure the axle stands are secure and both stands are locked in the same position.
6. **DO NOT LOAD OFF CENTRE AS FAILURE TO LEAVE LOAD SECURE COULD RESULT IN DAMAGE OR INJURY TO VEHICLE OR PERSONNEL**

Inspection and Maintenance

- Always check for wear and tear before and after use.
- Do not try and modify or repair axle stands.

The Tool Connection Limited cannot be held responsible in anyway what so ever for damage caused by using these jack stands. The Tool Connection offers a one year warranty on all products and will replace the product free of charge if material is found to be faulty.