6949 Instructions V1



Guarantee

If this product fails through faulty materials or workmanship, contact our service department direct on: +44 (0) 1926 818186. Normal wear and tear are excluded as are consumable items and abuse.



Distributed by The Tool Connection Ltd

Kineton Road, Southam, Warwickshire CV47 0DR T+44 (0) 1926 815000 F+44 (0) 1926 815888

The Complete Connection info@toolconnection.co.uk www.toolconnection.co.uk

6949

Brake Pipe Coating Removing Tool



www.lasertools.co.uk

www.lasertools.co.uk









For removing the plastic coating from Brake Pipes prior to flaring pipe.

- If the pipe is plastic covered, approximately 5-8mm of this covering must be removed from the end of the pipe to be flared.
- Use this tool which will safely remove the plastic coating plus the aluminium plating without damaging the pipe.
- Place the brake pipe against the stop.
- Adjust the blade against the pipe, and then tighten the control three further full turns.
- Steadily turn the coating remover tool around the pipe 10 to12 full turns to remove the plastic coating and aluminium plating.

Note: as the tool is turned, press it firmly in towards the pipe, as it will try to unwind the pipe away from the stop.





