

OBDII/EOBD Fault Code Reader

The following Diagnostic Trouble Code Definitions lists provide only Generic Diagnostic Trouble Codes. For Manufacturer Specific Diagnostic Trouble Code Definitions, consult the vehicle's service manual.

CAUTION: Parts or components should not be replaced based on only a DTC without first consulting the vehicle service manual for more information on possible causes of the fault as well as required testing procedures.

P0001	Fuel Volume Regulator Control Circuit Open	P0073	Ambient Air Temp. Sensor Circuit High
P0002	Fuel Volume Regulator Control Circuit Range/Performance	P0074	Ambient Air Temp. Sensor CKT Intermittent
P0003	Fuel Volume Regulator Control Circuit Low	P0075	Intake Valve-Bank 1 Control Circuit
P0004	Fuel Volume Regulator Control Circuit High	P0076	Intake Valve-Bank 1 Control Circuit Low
P0005	Fuel Shutoff Valve. A Control Circuit Open	P0077	Intake Valve-Bank 1 Control Circuit High
P0006	Fuel Shutoff Valve. A Control Circuit Low	P0078	Exhaust Valve-Bank1 Control Circuit
P0007	Fuel Shutoff Valve. A Control Circuit High	P0079	Exhaust Valve-Bank1 Control Circuit Low
P0008	Engine Position System Performance (Bank 1)	P0080	Exhaust Valve-Bank1 Control Circuit High
P0009	Engine Position System Performance (Bank 2)	P0081	Intake Valve-Bank 2 Control Circuit
P0010	Camshaft Position Actuator A - Bank 1 Circuit Malfunction	P0082	Intake Valve-Bank 2 Control Circuit Low
P0011	Camshaft Position Actuator A - Bank 1 Timing Over-Advanced	P0083	Intake Valve-Bank 2 Control Circuit High
P0012	Camshaft Position Actuator A - Bank 1 Timing Over-Retarded	P0084	Exhaust Valve-Bank2 Control Circuit
P0013	Camshaft Position Actuator B - Bank 1 Circuit Malfunction	P0085	Exhaust Valve-Bank2 Control Circuit Low
P0014	Camshaft Position Actuator B - Bank 1 Timing Over-Advanced	P0086	Exhaust Valve-Bank2 Control Circuit High
P0015	Camshaft Position Actuator B - Bank 1 Timing Over-Retarded	P0087	Fuel Rail Pressure Too Low
P0016	Cam/Crankshaft Pos. Correlation Sensor A - Bank 1	P0088	Fuel Rail Pressure Too High
P0017	Cam/Crankshaft Pos. Correlation Sensor B - Bank 1	P0089	Fuel Pressure Regulator 1 Performance
P0018	Cam/Crankshaft Pos. Correlation Sensor A - Bank 2	P0090	Fuel Pressure Regulator 1 Control Circuit
P0019	Cam/Crankshaft Pos. Correlation Sensor B - Bank 2	P0091	Fuel Pressure Regulator 1 Control Circuit Low
P0020	Camshaft Position Actuator A - Bank 2 Circuit Malfunction	P0092	Fuel Pressure Regulator 1 Control Circuit High
P0021	Camshaft Position Actuator A - Bank 2 Timing Over-Advanced	P0093	Fuel System Leak (Large)
P0022	Camshaft Position Actuator A - Bank 2 Timing Over-Retarded	P0094	Fuel System Leak (Small)
P0023	Camshaft Position Actuator B - Bank 2 Circuit Malfunction	P0095	IAT Sensor 2 Circuit
P0024	Camshaft Position Actuator B - Bank 2 Timing Over-Advanced	P0096	IAT Sensor 2 CKT Range/Performance
P0025	Camshaft Position Actuator B - Bank 2 Timing Over-Retarded	P0097	IAT Sensor 2 Circuit Low
P0026	Intake Valve-Bank 1 Control Solenoid CKT Range/Performance	P0098	IAT Sensor 2 Circuit High
P0027	Exhaust Valve-Bank1 Control Solenoid CKT Range/Performance	P0099	IAT Sensor 2 CKT Intermittent
P0028	Intake Valve-Bank 2 Control Solenoid CKT Range/Performance	P0100	MAF or VAF A Circuit Malfunction
P0029	Exhaust Valve-Bank2 Control Solenoid CKT Range/Performance	P0101	MAF or VAF A Circuit Range/Performance
P0030	H02S Bank 1 Sensor 1 Heater Circuit	P0102	MAF or VAF A Circuit Low Input
P0031	H02S Bank 1 Sensor 1 Heater Circuit Low	P0103	MAF or VAF A Circuit High Input
P0032	H02S Bank 1 Sensor 1 Heater Circuit High	P0104	MAF or VAF A Circuit Intermittent
P0033	Turbo/Sup Wastegate Control Circuit	P0105	MAP/BARO Circuit Malfunction
P0034	Turbo/Sup Wastegate Control Circuit Low	P0106	MAP/BARO CKT Range/Performance
P0035	Turbo/Sup Wastegate Control Circuit High	P0107	MAP/BARO Circuit Low Input
P0036	H02S Bank 1 Sensor 2 Heater Circuit	P0108	MAP/BARO Circuit High Input
P0037	H02S Bank 1 Sensor 2 Heater Circuit Low	P0109	MAP/BARO CKT Intermittent
P0038	H02S Bank 1 Sensor 2 Heater Circuit High	P0110	IAT Sensor Circuit Malfunction
P0039	Turbo/Super Charger Bypass Control CKT Performance	P0111	IAT Sensor 1 CKT Range/Performance
P0040	O2 Bank 1 Sensor 1 Signals Swapped w/ O2 Bank 2 Sensor 1	P0112	IAT Sensor 1 Circuit Low Input
P0041	O2 Bank 1 Sensor 2 Signals Swapped w/ O2 Bank 2 Sensor 2	P0113	IAT Sensor 1 Circuit High Input
P0042	H02S Bank 1 Sensor 3 Heater Circuit	P0114	IAT Sensor 1 CKT Intermittent
P0043	H02S Bank 1 Sensor 3 Heater Circuit Low	P0115	Engine Coolant Temp Circuit Malfunction
P0044	H02S Bank 1 Sensor 3 Heater Circuit High	P0116	Engine Coolant Temp CKT Range/Performance
P0045	Turbo/Super Charger Boost Control Solenoid A Circuit Open	P0117	Engine Coolant Temp Circuit Low Input
P0046	Turbo/Super Charger Boost Control Solenoid A Circuit Range/ Perform	P0118	Engine Coolant Temp Circuit High Input
P0047	Turbo/Super Charger Boost Control Solenoid A Circuit Low	P0119	Engine Coolant Temp CKT Intermittent
P0048	Turbo/Super Charger Boost Control Solenoid A Circuit High	P0120	TPS/Pedal Position Sensor A Circuit Malfunction
P0049	Turbo/Super Charger Boost Input/Turbine Speed Overspeed	P0121	TPS/Pedal Position Sensor A CKT Range/Performance
P0050	H02S Bank 2 Sensor 1 Heater Circuit	P0122	TPS/Pedal Position Sensor A Circuit Low Input
P0051	H02S Bank 2 Sensor 1 Heater Circuit Low	P0123	TPS/Pedal Position Sensor A Circuit High Input
P0052	H02S Bank 2 Sensor 1 Heater Circuit High	P0124	TPS/Pedal Position Sensor A CKT Intermittent
P0053	H02S Bank 1 Sensor 1 Heater Resistance	P0125	Closed Loop Fuel Ctrl Insufficient Coolant Temp
P0054	H02S Bank 1 Sensor 2 Heater Resistance	P0126	Coolant Temp Insufficient Stable Operation
P0055	H02S Bank 1 Sensor 3 Heater Resistance	P0127	IAT Sensor Too High
P0056	H02S Bank 2 Sensor 2 Heater Circuit	P0128	Coolant Temp Below Thermostat Regulating Temp
P0057	H02S Bank 2 Sensor 2 Heater Circuit Low	P0129	Barometric Pressure Too Low
P0058	H02S Bank 2 Sensor 2 Heater Circuit High	P0130	O2 Sensor Circuit Malfunction (Bank 1 Sensor 1)
P0059	H02S Bank 2 Sensor 1 Heater Resistance	P0131	O2 Sensor Circuit Low Volts (Bank 1 Sensor 1)
P0060	H02S Bank 2 Sensor 2 Heater Resistance	P0132	O2 Sensor Circuit High Volts (Bank 1 Sensor 1)
P0061	H02S Bank 2 Sensor 3 Heater Resistance	P0133	O2 Sensor CKT Slow Response (Bank 1 Sensor 1)
P0062	H02S Bank 2 Sensor 3 Heater Circuit	P0134	O2 Sensor CKT No Activity (Bank 1 Sensor 1)
P0063	H02S Bank 2 Sensor 3 Heater Circuit Low	P0135	O2 Sensor Heater Circuit Malfunction (Bank 1 Sensor 1)
P0064	H02S Bank 2 Sensor 3 Heater Circuit High	P0136	O2 Sensor Circuit Malfunction (Bank 1 Sensor 2)
P0065	Air Assisted Injector. Control Range/Performance	P0137	O2 Sensor Circuit Low Volts (Bank 1 Sensor 2)
P0066	Air Assisted Injector. Control Circuit Low	P0138	O2 Sensor Circuit High Volts (Bank 1 Sensor 2)
P0067	Air Assisted Injector. Control Circuit High	P0139	O2 Sensor CKT Slow Response (Bank 1 Sensor 2)
P0068	MAF/MAP Sensor Throttle Position Correlation	P0140	O2 Sensor CKT No Activity (Bank 1 Sensor 2)
P0069	MAP/BARO Correlation	P0141	O2 Sensor Heater Circuit Malfunction (Bank 1 Sensor 2)
P0070	Ambient Air Temp. Sensor Circuit	P0142	O2 Sensor Circuit Malfunction (Bank 1 Sensor 3)
P0071	Ambient Air Temp. Sensor Range/Performance	P0143	O2 Sensor Circuit Low Volts (Bank 1 Sensor 3)
P0072	Ambient Air Temp. Sensor Circuit Low	P0144	O2 Sensor Circuit High Volts (Bank 1 Sensor 3)

OBDII/EOBD Fault Code Reader

P0145	O2 Sensor CKT Slow Response (Bank 1 Sensor 3)	P0225	TPS/Pedal Position Sensor/Switch C Circuit Malfunction
P0146	O2 Sensor CKT No Activity (Bank 1 Sensor 3)	P0226	TPS/Pedal Position Sensor/Switch C CKT Range/Performance
P0147	O2 Sensor Heater Circuit Malfunction (Bank 1 Sensor 3)	P0227	TPS/Pedal Position Sensor/Switch C Circuit Low Input
P0148	Fuel Delivery Malfunction	P0228	TPS/Pedal Position Sensor/Switch C Circuit High Input
P0149	Fuel Timing Malfunction	P0229	TPS/Pedal Position Sensor/Switch C CKT Intermittent
P0150	O2 Sensor Circuit Malfunction (Bank 2 Sensor 1)	P0230	Fuel Pump Primary Circuit Malfunction
P0151	O2 Sensor Circuit Low Volts (Bank 2 Sensor 1)	P0231	Fuel Pump Secondary Circuit Low
P0152	O2 Sensor Circuit High Volts (Bank 2 Sensor 1)	P0232	Fuel Pump Secondary Circuit High
P0153	O2 Sensor CKT Slow Response (Bank 2 Sensor 1)	P0233	Fuel Pump Secondary Circuit Intermittent Ckt
P0154	O2 Sensor CKT No Activity (Bank 2 Sensor 1)	P0234	Engine Overboost Condition
P0155	O2 Sensor Heater Circuit Malfunction (Bank 2 Sensor 1)	P0235	Turbo/Super Boost Sensor A Circuit Malfunction
P0156	O2 Sensor Circuit Malfunction (Bank 2 Sensor 2)	P0236	Turbo/Super Boost Sensor A CKT Range/Performance
P0157	O2 Sensor Circuit Low Volts (Bank 2 Sensor 2)	P0237	Turbo/Super Boost Sensor A Circuit Low Input
P0158	O2 Sensor Circuit High Volts (Bank 2 Sensor 2)	P0238	Turbo/Super Boost Sensor A Circuit High Input
P0159	O2 Sensor CKT Slow Response (Bank 2 Sensor 2)	P0239	Turbo/Super Boost Sensor B Circuit Malfunction
P0160	O2 Sensor CKT No Activity (Bank 2 Sensor 2)	P0240	Turbo/Super Boost Sensor B CKT Range/Performance
P0161	O2 Sensor Heater Circuit Malfunction (Bank 2 Sensor 2)	P0241	Turbo/Super Boost Sensor B Circuit Low Input
P0162	O2 Sensor Circuit Malfunction (Bank 2 Sensor 3)	P0242	Turbo/Super Boost Sensor B Circuit High Input
P0163	O2 Sensor Circuit Low Volts (Bank 2 Sensor 3)	P0243	Turbo/Sup Wastegate Solenoid A Malfunction
P0164	O2 Sensor Circuit High Volts (Bank 2 Sensor 3)	P0244	Turbo/Sup Wastegate Solenoid A Range/Performance
P0165	O2 Sensor CKT Slow Response (Bank 2 Sensor 3)	P0245	Turbo/Sup Wastegate Solenoid A Low
P0166	O2 Sensor CKT No Activity (Bank 2 Sensor 3)	P0246	Turbo/Sup Wastegate Solenoid A High
P0167	O2 Sensor Heater Circuit Malfunction (Bank 2 Sensor 3)	P0247	Turbo/Sup Wastegate Solenoid B Malfunction
P0168	Engine Fuel Temperature Too High	P0248	Turbo /Sup Wastegate Solenoid B Range/Performance
P0169	Fuel Composition Incorrect	P0249	Turbo/Sup Wastegate Solenoid B Low
P0170	Fuel Trim Malfunction (Bank 1)	P0250	Turbo/Sup Wastegate Solenoid B High
P0171	System Too Lean (Bank 1)	P0251	Injection Pump Metering Control A
P0172	System Too Rich (Bank 1)	P0252	Injection Pump Metering Control A Range/Performance
P0173	Fuel Trim Malfunction (Bank 2)	P0253	Injection Pump Metering Control A Low
P0174	System Too Lean (Bank 2)	P0254	Injection Pump Metering Control A High
P0175	System Too Rich (Bank 2)	P0255	Injection Pump Metering Control A Intermittent (Cam/Rotor/Injector)
P0176	Fuel Compensation Sensor Circuit Malfunction	P0256	Injection Pump Metering Control B Malfunction (Cam/Rotor/Injector)
P0177	Fuel Compensation Sensor CKT Range/Performance	P0257	Injection Pump Metering Control B Range/Performance (Cam/Rotor/Injector)
P0178	Fuel Compensation Sensor Circuit Low Input	P0258	Injection Pump Metering Control B Low (Cam/Rotor/Injector)
P0179	Fuel Compensation Sensor Circuit High Input	P0259	Injection Pump Metering Control B High (Cam/Rotor/Injector)
P0180	Fuel Temperature Sensor A Circuit Malfunction	P0260	Injection Pump Metering Control B Intermittent (Cam/Rotor/Injector)
P0181	Fuel Temperature Sensor A CKT Range/Performance	P0261	Cylinder 1 Injector Control Circuit Low
P0182	Fuel Temperature Sensor A Circuit Low Input	P0262	Cylinder 1 Injector Control Circuit High
P0183	Fuel Temperature Sensor A Circuit High Input	P0263	Cylinder 1 Contribution Balance Fault
P0184	Fuel Temperature Sensor A CKT Intermittent	P0264	Cylinder 2 Injector Control Circuit Low
P0185	Fuel Temperature Sensor B Circuit Malfunction	P0265	Cylinder 2 Injector Control Circuit High
P0186	Fuel Temperature Sensor B CKT Range/Performance	P0266	Cylinder 2 Contribution Balance Fault
P0187	Fuel Temperature Sensor B Circuit Low Input	P0267	Cylinder 3 Injector Control Circuit Low
P0188	Fuel Temperature Sensor B Circuit High Input	P0268	Cylinder 3 Injector Control Circuit High
P0189	Fuel Temperature Sensor B CKT Intermittent	P0269	Cylinder 3 Contribution Balance Fault
P0190	Fuel Rail Pressure Sensor Circuit Malfunction	P0270	Cylinder 4 Injector Control Circuit Low
P0191	Fuel Rail Pressure Sensor CKT Range/Performance	P0271	Cylinder 4 Injector Control Circuit High
P0192	Fuel Rail Pressure Sensor Circuit Low Input	P0272	Cylinder 4 Contribution Balance Fault
P0193	Fuel Rail Pressure Sensor Circuit High Input	P0273	Cylinder 5 Injector Control Circuit Low
P0194	Fuel Rail Pressure Sensor CKT Intermittent	P0274	Cylinder 5 Injector Control Circuit High
P0195	Engine Oil Temp Sensor Circuit Malfunction	P0275	Cylinder 5 Contribution Balance Fault
P0196	Engine Oil Temp Sensor CKT Range/Performance	P0276	Cylinder 6 Injector Control Circuit Low
P0197	Engine Oil Temp Sensor Circuit Low Input	P0277	Cylinder 6 Injector Control Circuit High
P0198	Engine Oil Temp Sensor Circuit High Input	P0278	Cylinder 6 Contribution Balance Fault
P0199	Engine Oil Temp Sensor CKT Intermittent	P0279	Cylinder 7 Injector Control Circuit Low
P0200	Injector Circuit Open	P0280	Cylinder 7 Injector Control Circuit High
P0201	Injector Circuit Open Cylinder 1	P0281	Cylinder 7 Contribution Balance Fault
P0202	Injector Circuit Open Cylinder 2	P0282	Cylinder 8 Injector Control Circuit Low
P0203	Injector Circuit Open Cylinder 3	P0283	Cylinder 8 Injector Control Circuit High
P0204	Injector Circuit Open Cylinder 4	P0284	Cylinder 8 Contribution Balance Fault
P0205	Injector Circuit Open Cylinder 5	P0285	Cylinder 9 Injector Control Circuit Low
P0206	Injector Circuit Open Cylinder 6	P0286	Cylinder 9 Injector Control Circuit High
P0207	Injector Circuit Open Cylinder 7	P0287	Cylinder 9 Contribution Balance Fault
P0208	Injector Circuit Open Cylinder 8	P0288	Cylinder 10 Injector Control Circuit Low
P0209	Injector Circuit Open Cylinder 9	P0289	Cylinder 10 Injector Control Circuit High
P0210	Injector Circuit Open Cylinder 10	P0290	Cylinder 10 Contribution Balance Fault
P0211	Injector Circuit Open Cylinder 11	P0291	Cylinder 11 Injector Control Circuit Low
P0212	Injector Circuit Open Cylinder 12	P0292	Cylinder 11 Injector Control Circuit High
P0213	Cold Start Injector 1 Malfunction	P0293	Cylinder 11 Contribution Balance Fault
P0214	Cold Start Injector 2 Malfunction	P0294	Cylinder 12 Injector Control Circuit Low
P0215	Engine Shutoff Solenoid Malfunction	P0295	Cylinder 12 Injector Control Circuit High
P0216	Injection Timing Control Circuit Malfunction	P0296	Cylinder 12 Contribution Balance Fault
P0217	Engine Overtemp Condition	P0297	Vehicle Overspeed Error
P0218	Transmission Overtemp Condition	P0298	Engine Oil Temperature Too High
P0219	Engine Overspeed Condition	P0299	Turbo/Super Charger UnderBoost
P0220	TPS/Pedal Position Sensor/Switch B Circuit Malfunction	P0300	Random/Multiple Cylinder Misfire Detected
P0221	TPS/Pedal Position Sensor/Switch B CKT Range/Performance	P0301	Cylinder 1 Misfire Detected
P0222	TPS/Pedal Position Sensor/Switch B Circuit Low Input	P0302	Cylinder 2 Misfire Detected
P0223	TPS/Pedal Position Sensor/Switch B Circuit High Input	P0303	Cylinder 3 Misfire Detected
P0224	TPS/Pedal Position Sensor/Switch B CKT Intermittent	P0304	Cylinder 4 Misfire Detected

OBDII/EOBD Fault Code Reader

P0305	Cylinder 5 Misfire Detected	P0386	Crankshaft Position Sensor B CKT Range/Performance
P0306	Cylinder 6 Misfire Detected	P0387	Crankshaft Position Sensor B Circuit Low Input
P0307	Cylinder 7 Misfire Detected	P0388	Crankshaft Position Sensor B Circuit High Input
P0308	Cylinder 8 Misfire Detected	P0389	Crankshaft Position Sensor B CKT Intermittent
P0309	Cylinder 9 Misfire Detected	P0390	Camshaft Position Sensor B - Bank 2 Circuit Malfunction
P0310	Cylinder 10 Misfire Detected	P0391	Camshaft Position Sensor B - Bank 2 CKT Range/Performance
P0311	Cylinder 11 Misfire Detected	P0392	Camshaft Position Sensor B - Bank 2 Circuit Low Input
P0312	Cylinder 12 Misfire Detected	P0393	Camshaft Position Sensor B - Bank 2 Circuit High Input
P0313	Misfire Detected Low Fuel Level	P0394	Camshaft Position Sensor B - Bank 2 CKT Intermittent
P0314	Misfire Detected Cyl. not Specific	P0400	EGR Flow Malfunction
P0315	Crankshaft Position System Variation Not Learned	P0401	EGR Flow Insufficient
P0316	Misfire Detected 1st 1000 Revs.	P0402	EGR Flow Excessive
P0317	Rough Road Hardware Not Present	P0403	EGR Flow Circuit Malfunction
P0318	Rough Road Sensor A Signal Circuit	P0404	EGR Flow CKT Range/Performance
P0319	Rough Road Sensor B	P0405	EGR Flow Sensor A Circuit Low Input
P0320	Ignition/Dist Engine Speed Input Circuit Malfunction	P0406	EGR Flow Sensor A Circuit High Input
P0321	Ignition/Dist Engine Speed Input CKT Range/Performance	P0407	EGR Flow Sensor B Circuit Low Input
P0322	Ignition/Dist Engine Speed Input Circuit No Signal	P0408	EGR Flow Sensor B Circuit High Input
P0323	Ignition/Dist Engine Speed Input CKT Intermittent	P0409	EGR Flow Sensor A Circuit
P0324	Knock Control System Malfunction	P0410	Secondary Air Injection System Malfunction
P0325	Knock Sensor 1 Circuit Malfunction Bank 1 or 1 Sensor	P0411	Secondary Air Injection System Incorrect Flow
P0326	Knock Sensor 1 CKT Range/Performance Bank 1 or 1 Sensor	P0412	Secondary Air Injection System Valve A Malfunction
P0327	Knock Sensor 1 Circuit Low Input Bank 1 or 1 Sensor	P0413	Secondary Air Injection System Valve A CKT Open
P0328	Knock Sensor 1 Circuit High Input Bank 1 or 1 Sensor	P0414	Secondary Air Injection System Valve A CKT Short
P0329	Knock Sensor 1 CKT Intermittent Bank 1 or 1 Sensor	P0415	Secondary Air Injection System Valve B Malfunction
P0330	Knock Sensor 2 Circuit Malfunction (Bank 2)	P0416	Secondary Air Injection System Valve B CKT Open
P0331	Knock Sensor 2 CKT Range/Performance (Bank 2)	P0417	Secondary Air Injection System Valve B CKT Short
P0332	Knock Sensor 2 Circuit Low Input (Bank 2)	P0418	Secondary Air Injection System Relay A Malfunction
P0333	Knock Sensor 2 Circuit High Input (Bank 2)	P0419	Secondary Air Injection System Relay B Malfunction
P0334	Knock Sensor 2 CKT Intermittent (Bank 2)	P0420	Catalyst Efficiency Below Threshold (Bank 1)
P0335	Crankshaft Position Sensor A Circuit Malfunction	P0421	Warm Up Catalyst Below Threshold (Bank 1)
P0336	Crankshaft Position Sensor A CKT Range/Performance	P0422	Main Catalyst Below Threshold (Bank 1)
P0337	Crankshaft Position Sensor A Circuit Low Input	P0423	Heated Catalyst Below Threshold (Bank 1)
P0338	Crankshaft Position Sensor A Circuit High Input	P0424	Heated Catalyst Temp Below Threshold (Bank 1)
P0339	Crankshaft Position Sensor A CKT Intermittent	P0425	Catalyst Temp. Sensor (Bank 1 Sensor 1)
P0340	Camshaft Position Sensor A - Bank 1 Circuit Malfunction	P0426	Catalyst Temp. Sensor Performance (Bank 1 Sensor 1)
P0341	Camshaft Position Sensor A - Bank 1 CKT Range/Performance	P0427	Catalyst Temp. Sensor Circuit Low (Bank 1 Sensor 1)
P0342	Camshaft Position Sensor A - Bank 1 Circuit Low Input	P0428	Catalyst Temp. Sensor Circuit High (Bank 1 Sensor 1)
P0343	Camshaft Position Sensor A - Bank 1 Circuit High Input	P0429	Catalyst Heater Control (Bank 1)
P0344	Camshaft Position Sensor A - Bank 1 CKT Intermittent	P0430	Catalyst Efficiency Below Threshold (Bank 2)
P0345	Camshaft Position Sensor A - Bank 2 Circuit Malfunction	P0431	Warm Up Catalyst Below Threshold (Bank 2)
P0346	Camshaft Position Sensor A - Bank 2 CKT Range/Performance	P0432	Main Catalyst Below Threshold (Bank 2)
P0347	Camshaft Position Sensor A - Bank 2 Circuit Low Input	P0433	Heated Catalyst Below Threshold (Bank 2)
P0348	Camshaft Position Sensor A - Bank 2 Circuit High Input	P0434	Heated Catalyst Temp Below Threshold (Bank 2)
P0349	Camshaft Position Sensor A - Bank 2 CKT Intermittent	P0435	Catalyst Temp. Sensor (Bank 2 Sensor 1)
P0350	Ignition Coil Primary/Secondary Circuit Malfunction	P0436	Catalyst Temp. Sensor Performance (Bank 2 Sensor 1)
P0351	Ignition Coil A Primary/Secondary Circuit Malfunction	P0437	Catalyst Temp. Sensor Circuit Low (Bank 2 Sensor 1)
P0352	Ignition Coil B Primary/Secondary Circuit Malfunction	P0438	Catalyst Temp. Sensor Circuit High (Bank 2 Sensor 1)
P0353	Ignition Coil C Primary/Secondary Circuit Malfunction	P0439	Catalyst Heater Control (Bank 2)
P0354	Ignition Coil D Primary/Secondary Circuit Malfunction	P0440	EVAP Emission Control System Malfunction
P0355	Ignition Coil E Primary/Secondary Circuit Malfunction	P0441	EVAP Emission Control System Purge Flow Fault
P0356	Ignition Coil F Primary/Secondary Circuit Malfunction	P0442	EVAP Emission Control System Leak (Small)
P0357	Ignition Coil G Primary/Secondary Circuit Malfunction	P0443	EVAP Emission Control System Purge Valve C Fault
P0358	Ignition Coil H Primary/Secondary Circuit Malfunction	P0444	EVAP Emission Control System Purge Valve C Open
P0359	Ignition Coil I Primary/Secondary Circuit Malfunction	P0445	EVAP Emission Control System Purge Valve C Short
P0360	Ignition Coil J Primary/Secondary Circuit Malfunction	P0446	EVAP Emission Control System Vent Circuit Malf
P0361	Ignition Coil K Primary/Secondary Circuit Malfunction	P0447	EVAP Emission Control System Vent Circuit Open
P0362	Ignition Coil L Primary/Secondary Circuit Malfunction	P0448	EVAP Emission Control System Vent Circuit Short
P0363	Misfire Detected Fueling Disabled	P0449	EVAP Emission Control System Vent Vlv/Sol Malf
P0365	Camshaft Position Sensor B - Bank 1 Circuit Malfunction	P0450	EVAP Emission Control System Pres Sensor Fault
P0366	Camshaft Position Sensor B - Bank 1 CKT Range/Performance	P0451	EVAP Emission Control System Pres Sensor Range
P0367	Camshaft Position Sensor B - Bank 1 Circuit Low Input	P0452	EVAP Emission Control System Pres Sensor Low
P0368	Camshaft Position Sensor B - Bank 1 Circuit High Input	P0453	EVAP Emission Control System Pres Sensor High
P0369	Camshaft Position Sensor B - Bank 1 CKT Intermittent	P0454	EVAP Emission Control System Pres Sensor Erratic
P0370	Timing Reference High Resolution Signal A Malfunction	P0455	EVAP Emission Control System Leak (Large)
P0371	Timing Reference High Resolution Signal A Too Many Pulses	P0456	EVAP Emission Control System Leak Very Small
P0372	Timing Reference High Resolution Signal A Too Few Pulses	P0457	EVAP Emission Control System Leak Cap Loose/Off
P0373	Timing Reference High Resolution Signal A Erratic Pulses	P0458	EVAP System Canister Purge Sol Circuit Low
P0374	Timing Reference High Resolution Signal A No Pulses	P0459	EVAP System Canister Purge Sol Circuit High
P0375	Timing Reference High Resolution Signal B Malfunction	P0460	Fuel Level Sensor A Circuit Malfunction
P0376	Timing Reference High Resolution Signal B Too Many Pulses	P0461	Fuel Level Sensor A CKT Range/Performance
P0377	Timing Reference High Resolution Signal B Too Few Pulses	P0462	Fuel Level Sensor A Circuit Low Input
P0378	Timing Reference High Resolution Signal B Erratic Pulses	P0463	Fuel Level Sensor A Circuit High Input
P0379	Timing Reference High Resolution Signal B No Pulses	P0464	Fuel Level Sensor A CKT Intermittent
P0380	Glow Plug/Heater CKT A Malfunction	P0465	EVAP Emission Purge Flow Sensor Circuit Malfunction
P0381	Glow Plug/Heater Indicator Circuit Malfunction	P0466	EVAP Emission Purge Flow Sensor CKT Range/Performance
P0382	Glow Plug/Heater CKT B Malfunction	P0467	EVAP Emission Purge Flow Sensor Circuit Low Input
P0383	Glow Plug Module Control Circuit Low	P0468	EVAP Emission Purge Flow Sensor Circuit High Input
P0384	Glow Plug Module Control Circuit High	P0469	EVAP Emission Purge Flow Sensor CKT Intermittent
P0385	Crankshaft Position Sensor B Circuit Malfunction	P0470	Exhaust Pressure Sensor Circuit Malfunction

OBDII/EOBD Fault Code Reader

P0471	Exhaust Pressure Sensor CKT Range/Performance	P0551	Power Steering Pres Sensor CKT Range/Performance
P0472	Exhaust Pressure Sensor Circuit Low Input	P0552	Power Steering Pres Sensor Circuit Low Input
P0473	Exhaust Pressure Sensor Circuit High Input	P0553	Power Steering Pres Sensor Circuit High Input
P0474	Exhaust Pressure Sensor CKT Intermittent	P0554	Power Steering Pres Sensor CKT Intermittent
P0475	Exhaust Pressure Control Valve Circuit Malfunction	P0555	Brake Booster Pressure Sensor Circuit
P0476	Exhaust Pressure Control Valve CKT Range/Performance	P0556	Brake Booster Pressure Sensor CKT Range/Performance
P0477	Exhaust Pressure Control Valve Circuit Low Input	P0557	Brake Booster Pressure Sensor Circuit Low Input
P0478	Exhaust Pressure Control Valve Circuit High Input	P0558	Brake Booster Pressure Sensor Circuit High Input
P0479	Exhaust Pressure Control Valve CKT Intermittent	P0559	Brake Booster Pressure Sensor CKT Intermittent
P0480	Cooling Fan 1 Control Circuit	P0560	System Voltage Malfunction
P0481	Cooling Fan 2 Control Circuit	P0561	System Voltage Unstable
P0482	Cooling Fan 3 Control Circuit	P0562	System Voltage Low
P0483	Control Fan Rationality Check Malfunction	P0563	System Voltage High
P0484	Control Fan CKT Over Current	P0564	Cruise Control Multi-Function. Input A Signal Error
P0485	Control Fan Power/Ground Circuit Malfunction	P0565	Cruise Control On Signal Malfunction
P0486	EGR System Sensor B Circuit	P0566	Cruise Control Off Signal Malfunction
P0487	EGR TPS Control Circuit	P0567	Cruise Control Resume Signal Malfunction
P0488	EGR TPS Control CKT Range/Performance	P0568	Cruise Control Set Signal Malfunction
P0489	EGR Control Circuit Low	P0569	Cruise Control Coast Signal Malfunction
P0490	EGR Control Circuit High	P0570	Cruise Control Acceleration Signal Error
P0491	Secondary Air System (Bank 1)	P0571	Brake Switch A Circuit Malfunction
P0492	Secondary Air System (Bank 2)	P0572	Brake Switch A Circuit Low Input
P0493	Fan Speed Overspeed	P0573	Brake Switch A Circuit High Input
P0494	Fan Speed Low	P0574	Cruise Control Vehicle Speed Too High
P0495	Fan Speed High	P0575	Cruise Control Circuit Malfunction
P0496	EVAP Emission High Purge Flow Fault	P0576	Cruise Control Circuit Low Input
P0497	EVAP Emission Low Purge Flow Fault	P0577	Cruise Control Circuit High Input
P0498	EVAP Emission Vent Viv/Sol Malf Circuit Low	P0578	Cruise Control Multi-Function Input A Circuit Stuck
P0499	EVAP Emission Vent Viv/Sol Malf Circuit High	P0579	Cruise Control Multi-Function Input A CKT Range/Performance
P0500	Vehicle Speed Sensor A Malfunction	P0580	Cruise Control Multi-Function Input A Circuit Low
P0501	Vehicle Speed Sensor A Range/Performance	P0581	Cruise Control Multi-Function Input A Circuit High
P0502	Vehicle Speed Sensor A Circuit Low Input	P0582	Cruise Control Vacuum Control Circuit Open
P0503	Vehicle Speed Sensor A Erratic/High	P0583	Cruise Control Vacuum Control Circuit Low
P0504	Brake Switch A Brake Switch B Correlation	P0584	Cruise Control Vacuum Control Circuit High
P0505	Idle Control System Malfunction	P0585	Cruise Control Multi-Function Input Correlation
P0506	Idle Control System RPM Low	P0586	Cruise Control Vent Control Circuit Open
P0507	Idle Control System RPM High	P0587	Cruise Control Vent Control Circuit Low
P0508	Idle Control System Circuit Low	P0588	Cruise Control Vent Control Circuit High
P0509	Idle Control System Circuit High	P0589	Cruise Control Multi-Function Input B Circuit
P0510	Closed Throttle Position Switch	P0590	Cruise Control Multi-Function Input B Circuit Stuck
P0511	Idle Air Control Circuit	P0591	Cruise Control Multi-Function Input B CKT Range/Performance
P0512	Starter Signal Circuit	P0592	Cruise Control Multi-Function Input B Circuit Low
P0513	Immobilizer Incorrect	P0593	Cruise Control Multi-Function Input B Circuit High
P0514	Battery Temperature Sensor CKT Range/Performance	P0594	Cruise Control Servo Control Circuit Open
P0515	Battery Temperature Sensor Circuit	P0595	Cruise Control Servo Control Circuit Low
P0516	Battery Temperature Circuit Low	P0596	Cruise Control Servo Control Circuit High
P0517	Battery Temperature Circuit High	P0597	Cruise Control Circuit Open
P0518	Idle Air Control CKT Intermittent	P0598	Cruise Control Circuit Low
P0519	Idle Air Control System Performance	P0599	Cruise Control Circuit High
P0520	Engine Oil Pressure Sensor/Switch Circuit Malfunction	P0600	Serial Communication Link Malfunction
P0521	Engine Oil Pressure Sensor/Switch Range/Performance	P0601	Internal Control Module Memory Check Sum Error
P0522	Engine Oil Pressure Sensor/Switch Low Voltage	P0602	Control Module Programming Error
P0523	Engine Oil Pressure Sensor/Switch High Voltage	P0603	PCM Keep Alive Memory (KAM) Error
P0524	Engine Oil Pressure Too Low	P0604	PCM Random Access Memory (RAM) Error
P0525	Cruise Servo CKT Range/Performance	P0605	PCM Read Only Memory (ROM) Error
P0526	Fan Speed Sensor Circuit	P0606	PCM Processor Fault
P0527	Fan Speed Sensor CKT Range/Performance	P0607	Control Module Performance
P0528	Fan Speed Sensor Circuit No Signal	P0608	Control Module VSS Output A Malfunction
P0529	Fan Speed Sensor CKT Intermittent	P0609	Control Module VSS Output B Malfunction
P0530	A/C Refrigerant Pressure Sensor A Circuit Malfunction	P0610	Control Module Vehicle Options Malfunction
P0531	A/C Refrigerant Pressure Sensor A CKT Range/Performance	P0611	Injector Control Module Performance
P0532	A/C Refrigerant Pressure Sensor A Circuit Low Input	P0612	Injector Control Module Relay Control
P0533	A/C Refrigerant Pressure Sensor A Circuit High Input	P0613	TCM Processor Fault
P0534	A/C Refrigerant Charge Loss	P0614	ECM/TCM Incompatible
P0535	A/C Evaporator Temperature Sensor Circuit	P0615	Starter Relay Circuit
P0536	A/C Evaporator Temperature Sensor CKT Range/Performance	P0616	Starter Relay Circuit Low
P0537	A/C Evaporator Temperature Sensor Circuit Low	P0617	Starter Relay Circuit High
P0538	A/C Evaporator Temperature Sensor Circuit High	P0618	Alternative Fuel Module (KAM) Error
P0539	A/C Evaporator Temperature Sensor CKT Intermittent	P0619	Alternative Fuel Module Memory
P0540	Intake Air Heater A Circuit	P0620	Generator Control Malfunction
P0541	Intake Air Heater A Circuit Low	P0621	Generator L-Term. Lamp Control
P0542	Intake Air Heater A Circuit High	P0622	Generator F-Term. Field F Control
P0543	Intake Air Heater A Circuit Open	P0623	Generator Lamp Control Circuit
P0544	Exhaust Gas Temp. Sensor Circuit (Bank 1 Sensor 1)	P0624	Fuel Cap Lamp Circuit
P0545	Exhaust Gas Temp. Sensor Circuit Low (Bank 1 Sensor 1)	P0625	Generator F-Term. Circuit Low
P0546	Exhaust Gas Temp. Sensor Circuit High (Bank 1 Sensor 1)	P0626	Generator F-Term. Circuit High
P0547	Exhaust Gas Temp. Sensor Circuit (Bank 2 Sensor 1)	P0627	Fuel Pump A Control Circuit Open
P0548	Exhaust Gas Temp. Sensor Circuit Low (Bank 2 Sensor 1)	P0628	Fuel Pump A Control Circuit Low
P0549	Exhaust Gas Temp. Sensor Circuit High (Bank 2 Sensor 1)	P0629	Fuel Pump A Control Circuit High
P0550	Power Steering Pres Sensor Circuit Malfunction	P0630	PCM VIN Not Program. Or Mismatch

OBDII/EOBD Fault Code Reader

P0631	TCM VIN Not Program. Or Mismatch	P0711	Trans Fluid Temp Sensor A CKT Range/Performance
P0632	Odometer Code Not Programmed ECM/PCM	P0712	Trans Fluid Temp Sensor A Circuit Low Input
P0633	Immobilizer Code Not Programmed ECM/PCM	P0713	Trans Fluid Temp Sensor A Circuit High Input
P0634	PCM/ECM/TCM Internal Temp. Too High	P0714	Trans Fluid Temp Sensor A CKT Intermittent
P0635	Power Steering Control Circuit	P0715	Input/Turbine Speed Sensor A Circuit Malfunction
P0636	Power Steering Control Circuit Low	P0716	Input/Turbine Speed Sensor A CKT Range/Performance
P0637	Power Steering Control Circuit High	P0717	Input/Turbine Speed Sensor A Circuit No Signal
P0638	Throttle Actuator Range/Performance (Bank 1)	P0718	Input/Turbine Speed Sensor A CKT Intermittent
P0639	Throttle Actuator Range/Performance (Bank 2)	P0719	Brake Switch B Circuit Low Input
P0640	Intake Air Heater Control Circuit	P0720	Output Speed Sensor Circuit Malfunction
P0641	Sensor A Reference Voltage Circuit Open	P0721	Output Speed Sensor Circuit Range/Performance
P0642	Sensor A Reference Voltage Circuit Low	P0722	Output Speed Sensor Circuit No Signal
P0643	Sensor A Reference Voltage Circuit High	P0723	Output Speed Sensor CKT Intermittent
P0644	Driver Display Serial Communication Link	P0724	Brake Switch B Circuit High Input
P0645	A/C Clutch Relay Control Circuit	P0725	Engine Speed Sensor Circuit Malfunction
P0646	A/C Clutch Relay Control Circuit Low	P0726	Engine Speed Sensor CKT Range/Performance
P0647	A/C Clutch Relay Control Circuit High	P0727	Engine Speed Sensor Circuit No Signal
P0648	Immobilizer Lamp Circuit	P0728	Engine Speed Sensor CKT Intermittent
P0649	Cruise Control Lamp Circuit	P0729	Gear 6 Ratio Incorrect
P0650	MIL Control Circuit Malfunction	P0730	Gear Ratio Incorrect
P0651	Sensor B Reference Voltage Circuit Open	P0731	Gear 1 Ratio Incorrect
P0652	Sensor B Reference Voltage Circuit Low	P0732	Gear 2 Ratio Incorrect
P0653	Sensor B Reference Voltage Circuit High	P0733	Gear 3 Ratio Incorrect
P0654	Engine RPM Circuit Malfunction	P0734	Gear 4 Ratio Incorrect
P0655	Engine Hot Lamp Output Circuit Malfunction	P0735	Gear 5 Ratio Incorrect
P0656	Fuel Level Output Circuit Malfunction	P0736	Reverse Ratio Incorrect
P0657	Actuator Supply Voltage A Circuit Open	P0737	TCM Engine Speed Output Circuit
P0658	Actuator Supply Voltage A Circuit Low	P0738	TCM Engine Speed Output Circuit Low
P0659	Actuator Supply Voltage A Circuit High	P0739	TCM Engine Speed Output Circuit High
P0660	Intake Man Tuning Control CKT Open (Bank 1)	P0740	TCC Circuit Malfunction
P0661	Intake Man Tuning Control CKT Low (Bank 1)	P0741	Torque Converter CKT Performance Or Stuck Off
P0662	Intake Man Tuning Control CKT High (Bank 1)	P0742	Torque Converter Circuit Stuck On
P0663	Intake Man Tuning Control CKT Open (Bank 2)	P0743	Torque Converter Circuit Electrical
P0664	Intake Man Tuning Control CKT Low (Bank 2)	P0744	Torque Converter CKT Intermittent
P0665	Intake Man Tuning Control CKT High (Bank 2)	P0745	Pres Control Sol. A Circuit Malfunction
P0666	PCM/ECM/TCM Internal Temp. Sensor Circuit	P0746	Pres Control Sol. A CKT Performance Or Stuck Off
P0667	PCM/ECM/TCM Internal Temp. Sensor Range/Performance	P0747	Pres Control Sol. A Circuit Stuck On
P0668	PCM/ECM/TCM Internal Temp. Sensor Circuit Low	P0748	Pres Control Sol. A Circuit Electrical
P0669	PCM/ECM/TCM Internal Temp. Sensor Circuit High	P0749	Pres Control Sol. A CKT Intermittent
P0670	Glow Plug/Heater Module Control	P0750	Shift Solenoid A Malfunction
P0671	Glow Plug/Heater Cylinder 1	P0751	Shift Solenoid A CKT Performance Or Stuck Off
P0672	Glow Plug/Heater Cylinder 2	P0752	Shift Solenoid A Circuit Stuck On
P0673	Glow Plug/Heater Cylinder 3	P0753	Shift Solenoid A Circuit Electrical
P0674	Glow Plug/Heater Cylinder 4	P0754	Shift Solenoid A CKT Intermittent
P0675	Glow Plug/Heater Cylinder 5	P0755	Shift Solenoid B Malfunction
P0676	Glow Plug/Heater Cylinder 6	P0756	Shift Solenoid B CKT Performance Or Stuck Off
P0677	Glow Plug/Heater Cylinder 7	P0757	Shift Solenoid B Circuit Stuck On
P0678	Glow Plug/Heater Cylinder 8	P0758	Shift Solenoid B Circuit Electrical
P0679	Glow Plug/Heater Cylinder 9	P0759	Shift Solenoid B CKT Intermittent
P0680	Glow Plug/Heater Cylinder 10	P0760	Shift Solenoid C Malfunction
P0681	Glow Plug/Heater Cylinder 11	P0761	Shift Solenoid C CKT Performance Or Stuck Off
P0682	Glow Plug/Heater Cylinder 12	P0762	Shift Solenoid C Circuit Stuck On
P0683	Glow Plug/Heater Module Communication Problem	P0763	Shift Solenoid C Circuit Electrical
P0684	Glow Plug/Heater Communication Problem CKT Range/Performance	P0764	Shift Solenoid C CKT Intermittent
P0685	ECM/PCM Power Relay Control Circuit Open	P0765	Shift Solenoid D Malfunction
P0686	ECM/PCM Power Relay Control Circuit Low	P0766	Shift Solenoid D CKT Performance Or Stuck Off
P0687	ECM/PCM Power Relay Control Circuit High	P0767	Shift Solenoid D Circuit Stuck On
P0688	ECM/PCM Power Relay Sense Circuit Open	P0768	Shift Solenoid D Circuit Electrical
P0689	ECM/PCM Power Relay Sense Circuit Low	P0769	Shift Solenoid D CKT Intermittent
P0690	ECM/PCM Power Relay Sense Circuit High	P0770	Shift Solenoid E Malfunction
P0691	Fan 1 Control Circuit Low	P0771	Shift Solenoid E CKT Performance Or Stuck Off
P0692	Fan 1 Control Circuit High	P0772	Shift Solenoid E Circuit Stuck On
P0693	Fan 2 Control Circuit Low	P0773	Shift Solenoid E Circuit Electrical
P0694	Fan 2 Control Circuit High	P0774	Shift Solenoid E CKT Intermittent
P0695	Fan 3 Control Circuit Low	P0775	Pres Ctrl Sol. B Circuit Malfunction
P0696	Fan 3 Control Circuit High	P0776	Pres Ctrl Sol. B CKT Performance Or Stuck Off
P0697	Sensor C Reference Voltage Circuit Open	P0777	Pres Ctrl Sol. B Circuit Stuck On
P0698	Sensor C Reference Voltage Circuit Low	P0778	Pres Ctrl Sol. B Circuit Electrical
P0699	Sensor C Reference Voltage Circuit High	P0779	Pres Ctrl Sol. B CKT Intermittent
P0700	Trans Control Sys Malfunction	P0780	Shift Malfunction
P0701	Trans Control Sys Range/Performance	P0781	1-2 Shift Malfunction
P0702	Trans Control Sys Electrical	P0782	2-3 Shift Malfunction
P0703	Brake Switch B Circuit Malfunction	P0783	3-4 Shift Malfunction
P0704	Clutch Switch Input Circuit Malfunction	P0784	4-5 Shift Malfunction
P0705	Trans Range Sensor Circuit Malfunction (PRNDL Input)	P0785	Shift/Timing Solenoid Malfunction
P0706	Trans Range Sensor CKT Range/Performance	P0786	Shift/Timing Solenoid Range/Performance
P0707	Trans Range Sensor Circuit Low Input	P0787	Shift/Timing Solenoid Low
P0708	Trans Range Sensor Circuit High Input	P0788	Shift/Timing Solenoid High
P0709	Trans Range Sensor CKT Intermittent	P0789	Shift/Timing Solenoid Intermittent Ckt
P0710	Transmission Fluid Temperature Sensor Circuit Malfunction	P0790	Normal/Performance Switch Circuit Malfunction

OBDII/EOBD Fault Code Reader

P0791	Intermediate Shaft Speed Sensor A Circuit	P0871	Trans Fluid Press Sensor/Switch C CKT Range/Performance
P0792	Intermediate Shaft Speed Sensor A Circuit Range/Performance	P0872	Trans Fluid Press Sensor/Switch C Circuit Low
P0793	Intermediate Shaft Speed Sensor A Circuit No Signal	P0873	Trans Fluid Press Sensor/Switch C Circuit High
P0794	Intermediate Shaft Speed Sensor A CKT Intermittent	P0874	Trans Fluid Press Sensor/Switch C CKT Intermittent
P0795	Pres Ctrl Sol. C Malfunction	P0875	Trans Fluid Press Sensor/Switch D Circuit
P0796	Pres Ctrl Sol. C CKT Performance Or Stuck Off	P0876	Trans Fluid Press Sensor/Switch D CKT Range/Performance
P0797	Pres Ctrl Sol. C Circuit Stuck On	P0877	Trans Fluid Press Sensor/Switch D Circuit Low
P0798	Pres Ctrl Sol. C Circuit Electrical	P0878	Trans Fluid Press Sensor/Switch D Circuit High
P0799	Pres Ctrl Sol. C CKT Intermittent	P0879	Trans Fluid Press Sensor/Switch D CKT Intermittent
P0800	Transfer Case Control System MIL Request	P0880	TCM Power Input Signal
P0801	Reverse Inhibit Control Circuit Malfunction	P0881	TCM Power Input Signal Range/Performance
P0802	Trans Control Sys MIL Request Circuit Open	P0882	TCM Power Input Signal Low
P0803	1-4 Upshift (Skip Shift) Solenoid Circuit Malfunction	P0883	TCM Power Input Signal High
P0804	1-4 Upshift (Skip Shift) Lamp Circuit Malfunction	P0884	TCM Power Input Signal CKT Intermittent
P0805	Clutch Position Sensor Circuit Malfunction	P0885	TCM Power Relay Control Circuit Open
P0806	Clutch Position Sensor Circuit Range/Performance	P0886	TCM Power Relay Control Circuit Low
P0807	Clutch Position Sensor Circuit Low	P0887	TCM Power Relay Control Circuit High
P0808	Clutch Position Sensor Circuit High	P0888	TCM Power Relay Sense Circuit
P0809	Clutch Position Sensor Circuit Intermittent Ckt	P0889	TCM Power Relay Sense CKT Range/Performance
P0810	Clutch Position Control Malfunction	P0890	TCM Power Relay Sense Circuit Low
P0811	Clutch Slippage Excessive	P0891	TCM Power Relay Sense Circuit High
P0812	Reverse Input Circuit Malfunction	P0892	TCM Power Relay Sense CKT Intermittent
P0813	Reverse Output Circuit Malfunction	P0893	Multiple Gears Engaged
P0814	Trans Range Display Circuit Malfunction	P0894	Transmission Comp. Slipping
P0815	Upshift Switch Circuit Malfunction	P0895	Shift Time Too Short
P0816	Downshift Switch Circuit Malfunction	P0896	Shift Time Too Long
P0817	Starter Disable Circuit	P0897	Transmission Fluid Deteriorated
P0818	Driveline Disconnect Switch Input	P0898	Transmission Ctrl. MIL Request Circuit Low
P0819	Up/Down Shift SW Transmission Range Correlation	P0899	Transmission Ctrl. MIL Request Circuit High
P0820	Gear Lever X-Y Sensor Circuit	P0900	Clutch Actuator Circuit Open
P0821	Gear Lever X Sensor Circuit	P0901	Clutch Actuator CKT Range/Performance
P0822	Gear Lever Y Sensor Circuit	P0902	Clutch Actuator Circuit Low
P0823	Gear Lever X Sensor Circuit Intermittent Ckt	P0903	Clutch Actuator Circuit High
P0824	Gear Lever Y Sensor Circuit Intermittent Ckt	P0904	Gate Select Position Circuit
P0825	Gear Lever Push/Pull Switch (Shift Anticipate)	P0905	Gate Select Position CKT Range/Performance
P0826	Upshift Switch Downshift Switch Circuit	P0906	Gate Select Position Circuit Low
P0827	Upshift Switch Downshift Switch Circuit Low	P0907	Gate Select Position Circuit High
P0828	Upshift Switch Downshift Switch Circuit High	P0908	Gate Select Position CKT Intermittent
P0829	5-6 Shift	P0909	Gate Select Control Error
P0830	Clutch Position Switch A Circuit Malfunction	P0910	Gate Select Actuator Circuit Open
P0831	Clutch Position Switch A Circuit Low	P0911	Gate Select Actuator CKT Range/Performance
P0832	Clutch Position Switch A Circuit High	P0912	Gate Select Actuator Circuit Low
P0833	Clutch Position Switch B Circuit Malfunction	P0913	Gate Select Actuator Circuit High
P0834	Clutch Position Switch B Circuit Low	P0914	Gear Shift Position Circuit
P0835	Clutch Position Switch B Circuit High	P0915	Gear Shift Position CKT Range/Performance
P0836	4 Wheel Drive Switch Circuit Malfunction	P0916	Gear Shift Position Circuit Low
P0837	4 Wheel Drive Switch CKT Range/Performance	P0917	Gear Shift Position Circuit High
P0838	4 Wheel Drive Switch Circuit Low	P0918	Gear Shift Position CKT Intermittent
P0839	4 Wheel Drive Switch Circuit High	P0919	Gear Shift Position Control Error
P0840	Trans Fluid Press Sensor/Switch A Circuit Malfunction	P0920	Gear Shift Forward Actuator Circuit Open
P0841	Trans Fluid Press Sensor/Switch A CKT Range/Performance	P0921	Gear Shift Forward Actuator CKT Range/Performance
P0842	Trans Fluid Press Sensor/Switch A Circuit Low	P0922	Gear Shift Forward Actuator Circuit Low
P0843	Trans Fluid Press Sensor/Switch A Circuit High	P0923	Gear Shift Forward Actuator Circuit High
P0844	Trans Fluid Press Sensor/Switch A CKT Intermittent	P0924	Gear Shift Reverse Actuator Circuit Open
P0845	Trans Fluid Press Sensor/Switch B Circuit Malfunction	P0925	Gear Shift Reverse Actuator CKT Range/Performance
P0846	Trans Fluid Press Sensor/Switch B CKT Range/Performance	P0926	Gear Shift Reverse Actuator Circuit Low
P0847	Trans Fluid Press Sensor/Switch B Circuit Low	P0927	Gear Shift Reverse Actuator Circuit High
P0848	Trans Fluid Press Sensor/Switch B Circuit High	P0928	Gear Shift Lock Solenoid Ctrl Circuit Open
P0849	Trans Fluid Press Sensor/Switch B CKT Intermittent	P0929	Gear Shift Lock Solenoid Ctrl CKT Range/Performance
P0850	Park/Neutral Switch Input Circuit	P0930	Gear Shift Lock Solenoid Ctrl Circuit Low
P0851	Park/Neutral Switch Circuit Low Input	P0931	Gear Shift Lock Solenoid Ctrl Circuit High
P0852	Park/Neutral Switch Circuit High Input	P0932	Hydraulic Pressure Sensor Circuit
P0853	Drive Switch Input Circuit	P0933	Hydraulic Pressure Sensor CKT Range/Performance
P0854	Drive Switch Circuit Low Input	P0934	Hydraulic Pressure Sensor Circuit Low
P0855	Drive Switch Circuit High Input	P0935	Hydraulic Pressure Sensor Circuit High
P0856	Traction Control Input Signal	P0936	Hydraulic Pressure Sensor CKT Intermittent
P0857	Traction Control Input Signal Range/Performance	P0937	Hydraulic Oil Temp Sensor Circuit
P0858	Traction Control Input Signal Low	P0938	Hydraulic Oil Temp Sensor CKT Range/Performance
P0859	Traction Control Input Signal High	P0939	Hydraulic Oil Temp Sensor Circuit Low
P0860	Gear Shift Module Communications Circuit	P0940	Hydraulic Oil Temp Sensor Circuit High
P0861	Gear Shift Module Communications Circuit Low	P0941	Hydraulic Oil Temp Sensor CKT Intermittent
P0862	Gear Shift Module Communications Circuit High	P0942	Hyd. Pressure Unit
P0863	TCM Communications Circuit	P0943	Hyd. Pressure Unit Cycling Too Short
P0864	TCM Communications CKT Range/Performance	P0944	Hyd. Pressure Unit Loss of Pressure
P0865	TCM Communications Circuit Low	P0945	Hyd. Pump Relay Circuit Open
P0866	TCM Communications Circuit High	P0946	Hyd. Pump Relay CKT Range/Performance
P0867	Trans Fluid Press	P0947	Hyd. Pump Relay Circuit Low
P0868	Trans Fluid Press Low	P0948	Hyd. Pump Relay Circuit High
P0869	Trans Fluid Press High	P0949	Auto Shift Adaptive Learning Not Complete
P0870	Trans Fluid Press Sensor/Switch C Circuit	P0950	Auto Shift Manual Control Circuit

OBDII/EOBD Fault Code Reader

P0951	Auto Shift Manual Control CKT Range/Performance
P0952	Auto Shift Manual Control Circuit Low
P0953	Auto Shift Manual Control Circuit High
P0954	Auto Shift Manual Control CKT Intermittent
P0955	Auto Shift Manual Mode Circuit
P0956	Auto Shift Manual Mode CKT Range/Performance
P0957	Auto Shift Manual Mode Circuit Low
P0958	Auto Shift Manual Mode Circuit High
P0959	Auto Shift Manual Mode CKT Intermittent
P0960	Pressure Control Solenoid A Control Circuit Open
P0961	Pressure Control Solenoid A Control CKT Range/Performance
P0962	Pressure Control Solenoid A Control Circuit Low
P0963	Pressure Control Solenoid A Control Circuit High
P0964	Pressure Control Solenoid B Control Circuit Open
P0965	Pressure Control Solenoid B Control CKT Range/Performance
P0966	Pressure Control Solenoid B Control Circuit Low
P0967	Pressure Control Solenoid B Control Circuit High
P0968	Pressure Control Solenoid C Control Circuit Open
P0969	Pressure Control Solenoid C Control CKT Range/Performance
P0970	Pressure Control Solenoid C Control Circuit Low
P0971	Pressure Control Solenoid C Control Circuit High
P0972	Shift Solenoid A Control CKT Range/Performance
P0973	Shift Solenoid A Control Circuit Low
P0974	Shift Solenoid A Control Circuit High
P0975	Shift Solenoid B Control CKT Range/Performance
P0976	Shift Solenoid B Control Circuit Low
P0977	Shift Solenoid B Control Circuit High
P0978	Shift Solenoid C Control CKT Range/Performance
P0979	Shift Solenoid C Control Circuit Low
P0980	Shift Solenoid C Control Circuit High
P0981	Shift Solenoid D Control CKT Range/Performance
P0982	Shift Solenoid D Control Circuit Low
P0983	Shift Solenoid D Control Circuit High
P0984	Shift Solenoid E Control CKT Range/Performance
P0985	Shift Solenoid E Control Circuit Low
P0986	Shift Solenoid E Control Circuit High
P0987	Trans Fluid Press Sensor/Switch E Circuit
P0988	Trans Fluid Press Sensor/Switch E CKT Range/Performance
P0989	Trans Fluid Press Sensor/Switch E Circuit Low
P0990	Trans Fluid Press Sensor/Switch E Circuit High
P0991	Trans Fluid Press Sensor/Switch E CKT Intermittent
P0992	Trans Fluid Press Sensor/Switch F Circuit
P0993	Trans Fluid Press Sensor/Switch F CKT Range/Performance
P0994	Trans Fluid Press Sensor/Switch F Circuit Low
P0995	Trans Fluid Press Sensor/Switch F Circuit High
P0996	Trans Fluid Press Sensor/Switch F CKT Intermittent
P0997	Shift Solenoid F Control CKT Range/Performance
P0998	Shift Solenoid F Control Circuit Low
P0999	Shift Solenoid F Control Circuit High