

## Fuel Tank Sender Wrench

A universal fuel tank sender wrench to remove and refit collars without damage.



### Additional Information

- Adjustable range: 89 - 170mm.
- Knurled lock to maintain position of arms.
- Universal use.
- Drive with a 19mm socket.
- 

<http://lasertools.co.uk/product/6134>

