

## LTR Crank Removal Tool

This crank extractor is used for the correct removal of crank arms and chainsets that use a square-tapered, or splined ISIS Drive, bottom bracket. The threaded collar screws into the crank arm before the drive bolt gently forces the bottom bracket axle away from the tool and out of the crank arm. It also features a 14mm socket at one end for the removal of the crank bolt/nut.



### Additional Information

- Compact crank pulling tool, suitable for use on square or ISIS drive crank arms.
- Includes 14mm socket for the removal of the crank bolt.
- Features a rotating tip for ease of use.
- For use with a 16mm spanner, please see Laser Part No. 1561.
- 

<http://lasertools.co.uk/product/8173>

