

Safety Precautions - Please read:

- If the engine has been identified as an Interference engine, damage to the engine will occur if the timing belt has been damaged. A compression check of all the cylinders should be taken before the cylinder head (s) are removed.
- Do not turn crankshaft or camshaft when the timing belt/chain has been removed.
- To make turning the engine easier, remove the spark plugs/glow plugs or injectors.
- Observe all tightening torques.
- Do not turn the engine using the camshaft or any other sprocket.
- Disconnect the battery earth lead (check Radio code is available).
- Do not use cleaning fluids on belts, sprockets or rollers.
- Some toothed timing belts are not interchangeable. Check the replacement belt has the correct tooth profile.
- Always mark the belt with the direction of running before removal.
- Do not lever or force the belt onto its sprockets.
- Do not use timing pins to lock the engine when slackening or tightening the crankshaft pulley bolts.
- ALWAYS REFER TO A REPUTABLE MANUFACTURERS WORKSHOP MANUAL.



1868_Instructions_V5

Guarantee

If this product fails through faulty materials or workmanship, contact our service department direct on: +44 (0) 1926 818186. Normal wear and tear are excluded as are consumable items and abuse.



www.lasertools.co.uk



Distributed by The Tool Connection Ltd
Kineton Road, Southern, Warwickshire CV47 0DR
T +44 (0) 1926 815000 F +44 (0) 1926 815888
info@toolconnection.co.uk www.toolconnection.co.uk

www.lasertools.co.uk

LASER®


Part No. 1868

Diesel Timing Kit - for VAG, Ford



www.lasertools.co.uk

Components

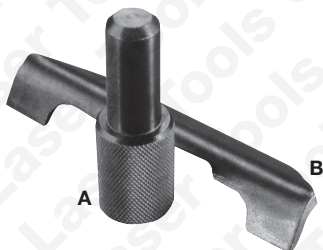

Ref.	Code	OEM Ref.	Description
A	C061	15 046, 2064, 23 047, 5193, 999 5193, U20003	Setting Spigot
B	C188	2065A, 21 105, MP 1 312	Setting Bracket

Applications

Engine Codes


1.6 D/ Turbo	1.7 SDI	1.9 SDI/ TDI	2.0 D/ Turbo	2.4 D
1V CR CS CY JK JP JR JX ME RA SB	AHB AHG AKU AKW KY	1X 1Y 1Z AAZ ABL AEF AEY AFF AFN AGD AHH AHU ALE ASX AVG	CN DE NC	1G 1S 3D AAB AAS ACL ACT AJA DV DW

Applications


Manufacturer	Model	Year
Audi	80	1982 - 1996
	90	1986 - 1991
	100	1978 - 1994
	200	1982 - 2001
	A4/ quattro	1995 - 2001
	A6/ quattro	1994 - 2002
	Cabriolet	1995 - 2000
Seat	Alhambra	1996 - 2000
	Cordoba	1993 - 1999
	Ibiza	1993 - 1999
	Inca	1996 - 2004
	Toledo	1994 - 2009
Volkswagen	Caddy I/II	1980 - 2000
	Golf I/II/III	1980 - 1999
	Jetta I/II	1980 - 1992
	Lupo	1998 - 2005
	Passat	1980 - 2001
	Polo	1996 - 2002
	Santana	1980 - 1988
	Sharan	1995 - 2000
	Vento	1991 - 1998
	LT	1982 - 1996
	Transporter T3/T4	1981 - 1990
	Transporter T4	1990 - 2003
Ford	Galaxy	1995 - 2000

Component Use

Component A

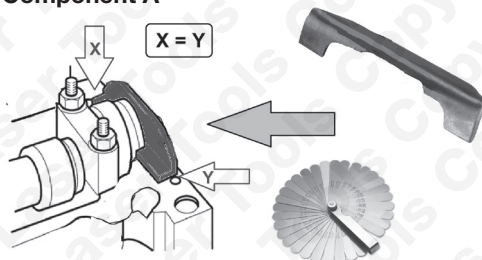

Component B

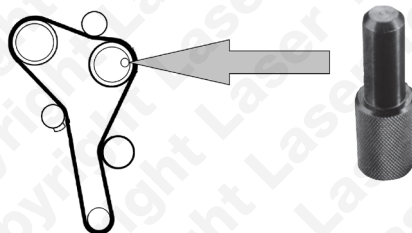

Always refer to the website for most up to date applications:
www.lasertools.co.uk/product/1868