

Our products are designed to be used correctly and with care for the purpose for which they are intended. No liability is accepted by the Tool Connection for incorrect use of any of our products, and the Tool Connection cannot be held responsible for any damage to personnel, property or equipment when using the tools. Incorrect use will also invalidate the warranty.

If applicable, the applications database and any instructional information provided has been designed to offer general guidance for a particular tool's use and while all attention is given to the accuracy of the data no project should be attempted without referring first to the manufacturer's technical documentation (workshop or instruction manual) or the use of a recognised authority such as Autodata.

It is our policy to continually improve our products and thus we reserve the right to alter specifications and components without prior notice. It is the responsibility of the user to ensure the suitability of the tools and information prior to their use.

LASER[®]

7467

Subframe Alignment Pins Ford

Instructions



- Application: For a wide range of Ford vehicles - Including: C-Max, Cougar, Escort, Fiesta, Focus, Fusion, Galaxy, Kuga, Mondeo, Orion, Puma, S-Max, Tourneo Connect, Transit, Transit Connect, Transit Custom.
- Equivalent to OEM 205-316A.
- Ensure correct alignment of subframe, suspension and steering components.
- Use in accordance with manufacturer's instructions.

7467_Instructions_V2

Guarantee

If this product fails through faulty materials or workmanship, contact our service department direct on: +44 (0) 1926 818186. Normal wear and tear are excluded as are consumable items and abuse.



Distributed by The Tool Connection Ltd

Kinerton Road, Southam, Warwickshire CV47 0DR
T +44 (0) 1926 815000 F +44 (0) 1926 815888
info@toolconnection.co.uk www.toolconnection.co.uk



5 018341 074678 >


www.lasertools.co.uk

www.lasertools.co.uk

Description

The tool is designed to quickly and simply align the subframe to ensure the vehicle axle, suspension and steering components remain correctly aligned on the vehicle.

Components

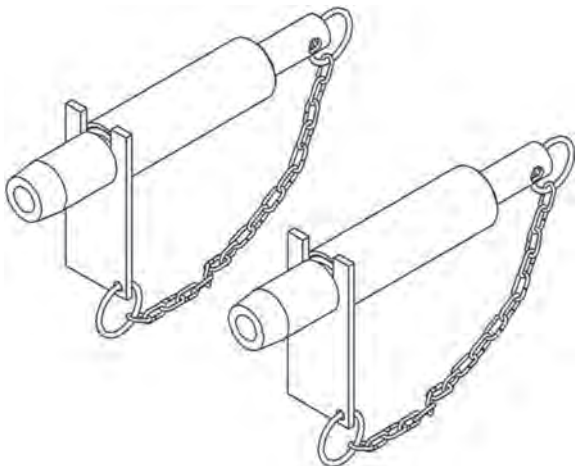

Applications

For a wide range of Ford vehicles - Including:

C-Max, Cougar, Escort, Fiesta, Focus, Fusion, Galaxy, Kuga, Mondeo, Orion, Puma, S-Max, Tourneo Connect, Transit, Transit Connect, Transit Custom.

The following instructions are for guidance only. Please refer to OEM derived data such as the vehicles manufacturer's own data or Autodata. The use of this subframe alignment kit is purely down to the user's discretion and The Tool Connection Ltd cannot be held responsible for any damage caused what so ever.



Instructions

NOTE: Due to the number of vehicles covered by this kit it is not possible to give model specific instructions. The following instructions are for guidance only please refer to Ford OEM data for model specific instructions.

- When refitting the subframe first identify the subframe pin alignment holes. The example here is for a Mondeo.
- Mount the tool in accordance with the OEM instructions using the clip to hold the pins in place and then raise the subframe so the alignment pins align with the alignment holes in the vehicle chassis.
- Fit and tighten the subframe mounting bolts before removing the alignment pins.

