Our products are designed to be used correctly and with care for the purpose for which they are intended. No liability is accepted by the Tool Connection for incorrect use of any of our products, and the Tool Connection cannot be held responsible for any damage to personnel, property or equipment when using the tools. Incorrect use will also invalidate the warranty.

If applicable, the applications database and any instructional information provided has been designed to offer general guidance for a particular tool's use and while all attention is given to the accuracy of the data no project should be attempted without referring first to the manufacturer's technical documentation (workshop or instruction manual) or the use of a recognised authority such as Autodata.

It is our policy to continually improve our products and thus we reserve the right to alter specifications and components without prior notice. It is the responsibility of the user to ensure the suitability of the tools and information prior to their use.

7673 Instructions V2

Guarantee

If this product fails through faulty materials or workmanship, contact our service department direct on: +44 (0) 1926 818186. Normal wear and tear are excluded as are consumable items and abuse.



Kineton Road, Southam, Warwickshire CV47 0DR T+44 (0) 1926 815000 F+44 (0) 1926 815888 info@tolconnection.co.uk www.tolconnection.co.uk



LASER®

7673

Shock Absorber & Macpherson Strut Tool Kit - 24pc



www.lasertools.co.uk

www.lasertools.co.uk

Shock Absorber & Macpherson Strut Tool Kit

Description:

A 24 piece kit designed to allow the user to dismantle the top mounts used on the most common shock absorbers.

Kit includes:

1 x 1/2"D (21mm Hex) Go Thru' Ratchet; 2 x Magnetic Extension bars 1/2"D - 95mm and 190mm; 1 x Special Extension Bar 120mm.

3 x Slot Socket Adaptors: 5mm x 8mm, 6mm x 8mm, 8mm x 11mm.

 $7\,\mathrm{x}$ Go Thru' Sockets 16mm, 17mm, 18mm, 19mm, 21mm, 22mm, 24mm x 78mm long.


6 x 8mm Hex Shank Bits: Hex 5mm, 6mm, 7mm, 8mm, Spline M10 and Star T50 and 4 Hex Socket Adaptors: 7mm, 8mm, 9mm, 10mm.

The go-thru socket design combined with the special extension socket allows for access to a depth of 188mm.

Examples of use include:

- 5mm Hex for BMW 1 Series from 2011, 2 Series 3 Series & 4 Series from 2013, X1 from 2015 on combined with appropriate socket.
- 8mm Hex for pre 2012 BMW combined with appropriate socket.
- 6mm Hex and 8mm Hex used on Mercedes with 19mm socket.
- 7mm for GM/Vauxhall combined with appropriate socket.
- Slot Bit Socket combined with 17mm Socket used on Volkswagen and Audi models.

Instructions

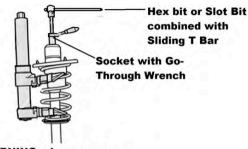

WARNING: always use appropriate spring compressor before removing top fixings

Warning:

Warning: always use appropriate spring compressor before removing top fixings.

Applications are for guidance only.

2