


Subframe Bush Installer/Remover - for Mercedes-Benz


Designed for the removal and installation of the front and rear sub-frame bushes on the Mercedes-Benz models listed.

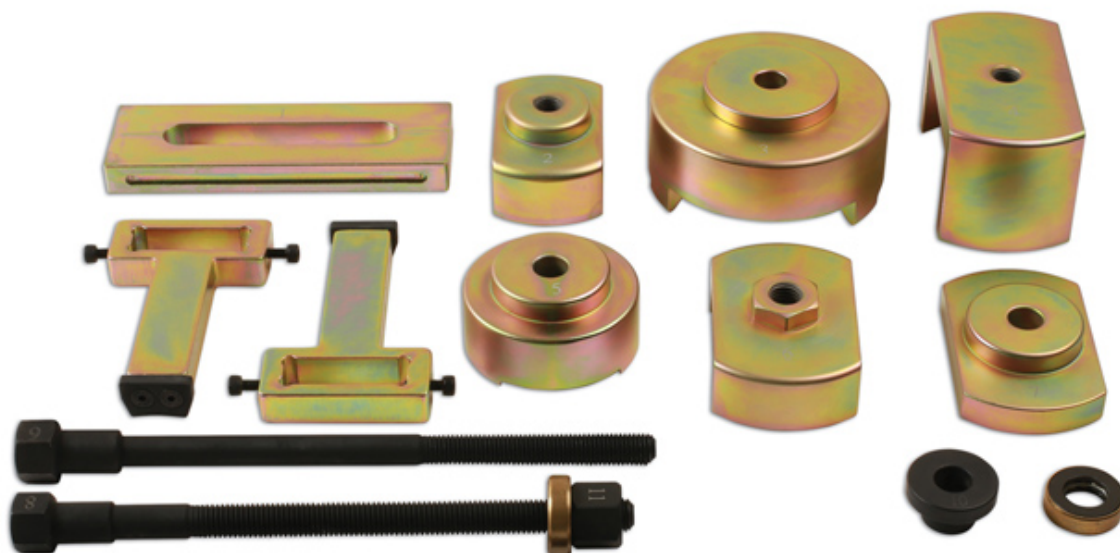

Additional Information

- Applications include: Mercedes Benz C-Class (2007 to 2016), E-Class (2009 to 2017), CLS (2010 to 2018), GLK (2008 to 2015) & SL (from 2012).
- Chassis codes covered include: W204, S204, C204, W212, S212, C207, A207 & C218.
- Equivalent to OEM 204 589 00 43 00.
- Manufactured from carbon steel, with a Chrome Molybdenum force screw.
- NOTE: Always ensure the force screw is lubricated with molybdenum disulphide grease before use.

<http://lasertools.co.uk/product/7794>

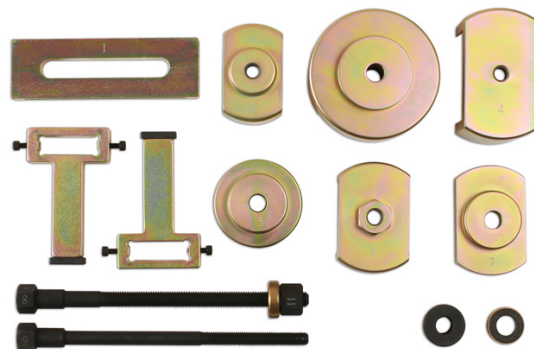

Installing



FRONT



BACK

Removing



FRONT



BACK

