

Our products are designed to be used correctly and with care for the purpose for which they are intended. No liability is accepted by the Tool Connection for incorrect use of any of our products, and the Tool Connection cannot be held responsible for any damage to personnel, property or equipment when using the tools. Incorrect use will also invalidate the warranty.

If applicable, the applications database and any instructional information provided has been designed to offer general guidance for a particular tool's use and while all attention is given to the accuracy of the data no project should be attempted without referring first to the manufacturer's technical documentation (workshop or instruction manual) or the use of a recognised authority such as Autodata.

It is our policy to continually improve our products and thus we reserve the right to alter specifications and components without prior notice. It is the responsibility of the user to ensure the suitability of the tools and information prior to their use.



**Safety First. Be Protected.**

#### Guarantee

If this product fails through faulty materials or workmanship, contact our service department direct on: **+44 (0) 1926 818186**. Normal wear and tear are excluded as are consumable items and abuse.



Distributed by The Tool Connection Ltd

Kineton Road, Southam, Warwickshire CV47 0DR  
T +44 (0) 1926 815000 F +44 (0) 1926 815888  
info@toolconnection.co.uk [www.toolconnection.co.uk](http://www.toolconnection.co.uk)



5 018341 061654 >

# LASER<sup>®</sup>

6165

## Internal Bearing Puller Set


### Instructions



Ideal for motorcycle wheel bearings, machine tool blind bearings, spigot bush extraction, general internal bearing extraction.

The puller set offers two methods of extraction.

## Components

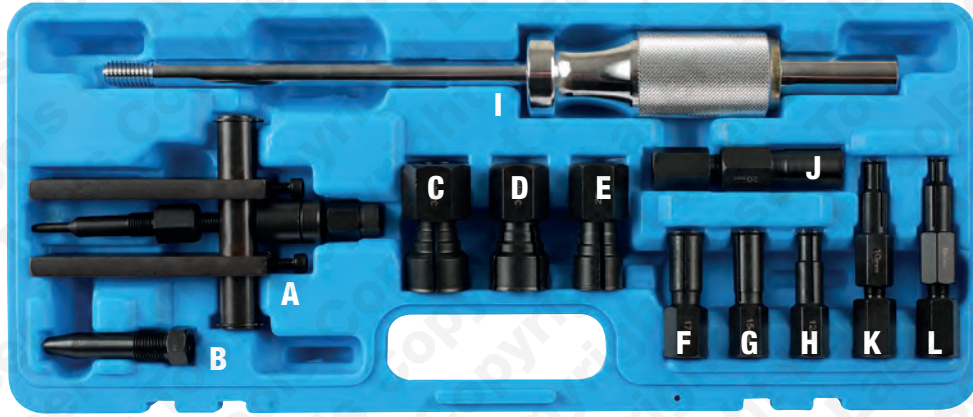


For Use With Leg Puller	Size/Type
A	2 Leg Puller
B	Tapered Bolt
C	32mm
D	30mm
E	25mm
F	17mm
G	15mm
H	12mm

For Use With Slide Hammer	Size/Type
I	SlideHammer
J	20mm
K	10mm
L	8mm

## Method 1 - 2 Leg Puller Option

1. Connect the required adaptor wedge to the puller as shown.
2. Connect the adaptor to the wedge.
3. Use spacers where required.
4. Once connected to the bearing using a hex key, hold the centre thread still while turning the force screw nut (5) in a clockwise direction.

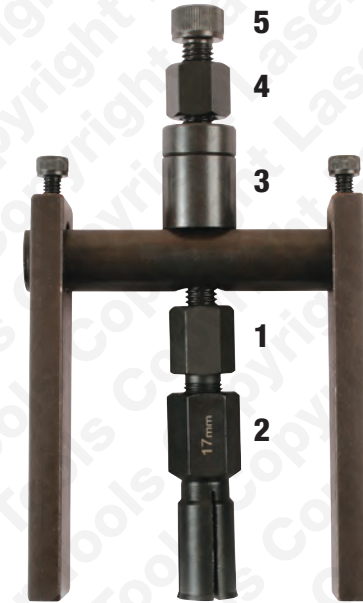

## Method 2 - Slide Hammer Option

1. Connect the appropriate adaptor wedge to the slide hammer as shown.
2. Connect the adaptor to the wedge, place the adaptor into the bearing and tighten the wedge to spread the adaptor. Use the slide hammer to extract the bearing.

